

cut'n'boss™

the all-in-one embosser  
& die cutter®

 craftwell™

fully automatic  
embosser & die cutter

## USER MANUAL



**FULLY AUTOMATIC** • AUTOMATIQUE • COMPLETAMENTE AUTOMÁTICO

**NO MANUAL CRANKING** • PAS DE MANIVELLES • SIN MANIVELAS

 
 
**QUICK & EASY** • RAPIDE ET FACILE • RÁPIDA Y FÁCIL



# craftwell™

embossing folder  
& cutting die  
collections

See our full selection of embossing folders  
& cutting dies at [www.craftwellusa.com](http://www.craftwellusa.com)

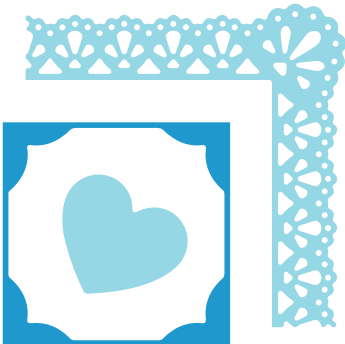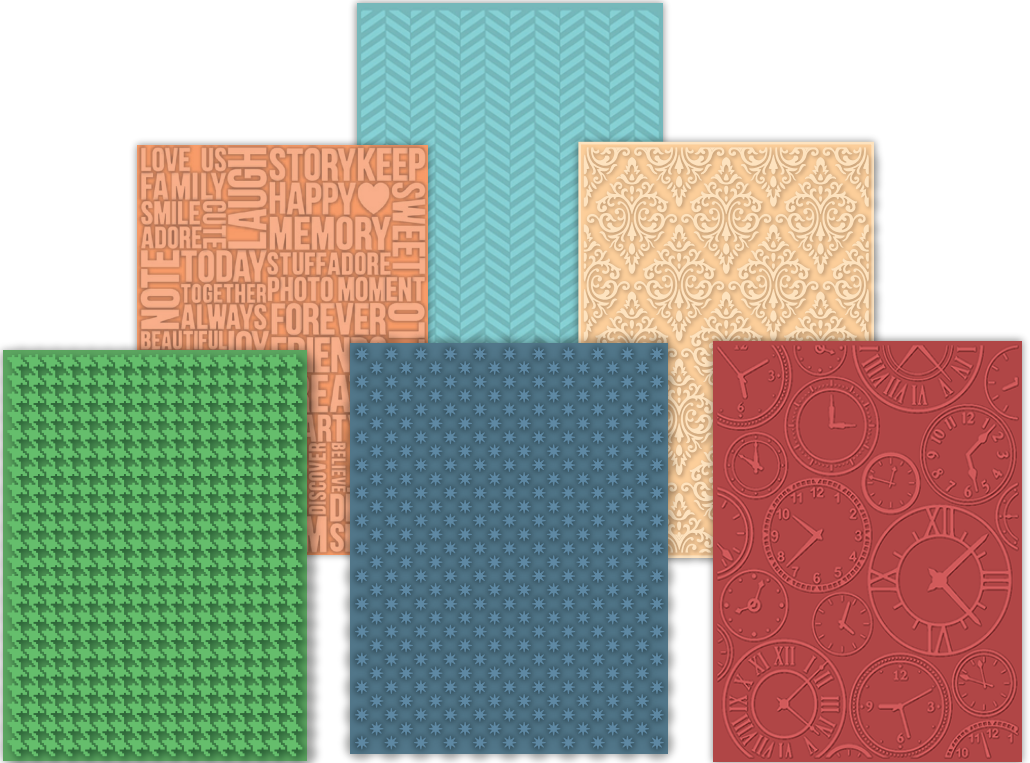


## TRENDING

## IN THE BOX

- Cut'n'Boss machine
- (1) Embossing Folder
- (6) Cutting Dies
- Platforms
  - (2) Platform A
  - (1) Platform B
  - (1) Platform D
- Magnetic Shim
- User Manual
- Power Adaptor
 
## GETTING STARTED

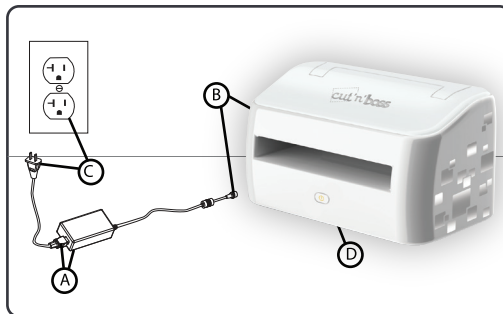

Position the Cut'n'Boss on a flat & dry surface.

Connect the power adaptor to the power cord (A).

Connect the power cord to the Cut'n'Boss (B).

Connect the power plug to a grounded power outlet (C).

Press the power button to turn on (D).

# OPERATING YOUR CUT'N'BOSS™



Press the power button to turn on; the power button will light up.

 
Guide the correct platform combination into the front of the machine.

It will automatically activate and the platform combination will feed through.

The machine will stop automatically when it reaches the end of the platform combination.

Remove the platforms once the motor stops running.

# USING EMBOSsing FOLDERS

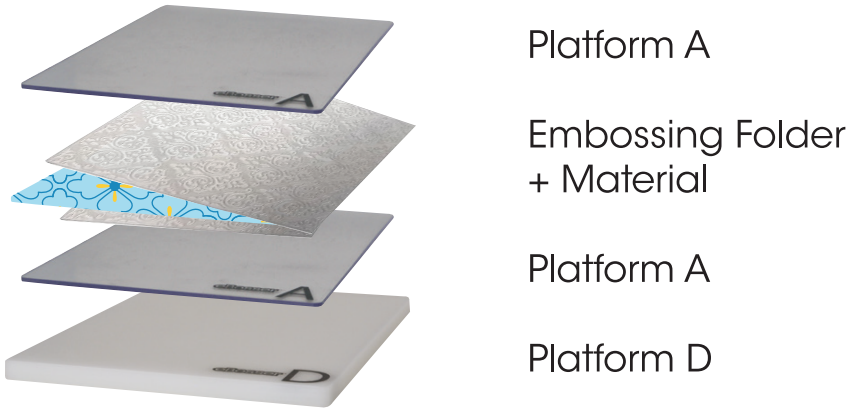

Position material inside the embossing folder.

Position the embossing folder between platforms 'A' & 'A'.

Stack the combination onto platform 'D'.

Keeping the platform combination straight, guide it into the Cut'n'Boss with a steady forward motion.


Release the platforms when the rollers begin pulling them into the machine.

Remove the platforms once the motor stops running.

Tips: For best results, experiment with scrap paper first.

For greater pressure, insert a piece of paper between platforms 'A' & 'D'.

# USING CRAFTWELL™ CUTTING DIES

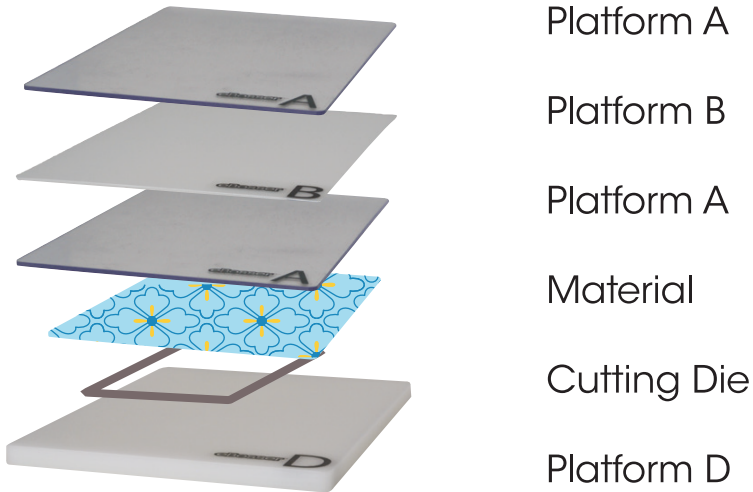 

Position the cutting die, blade side up, smooth side sitting on platform 'D'.

Position the material over the cutting die then place platform combination 'A', 'B', 'A' on top of the material.

Keeping the platform combination straight, guide it into the Cut'n'Boss with a steady forward motion.


Release the platforms when the rollers begin pulling them into the machine.

Remove the platforms once the motor stops running.

Optional: Place the magnetic shim between platform 'D' & the cutting die if more pressure is needed.

Important: Never place the magnetic shim or platform 'B' as the top or bottom layer of the platform combination

# USING CRAFTWELL™ CUTTING DIES WITH METAL ADAPTER PLATE\*

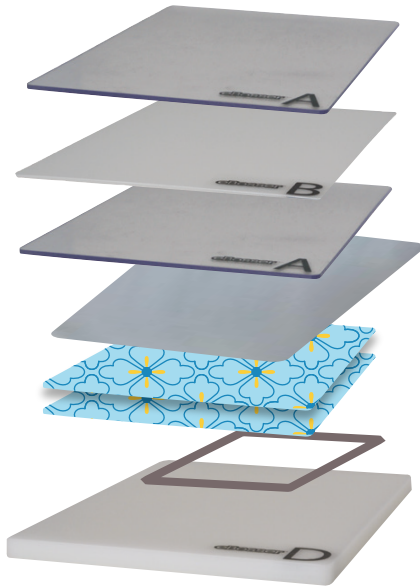 

Platform A

Platform B

Platform A

Metal Adapter Plate\*  
\*optional

Materials

Cutting Die

Platform D

When cutting multiple layers of material, you may use the metal adapter plate to increase cutting pressure.

Position the cutting die , blade side up, smooth side sitting on platform 'D'.

Position the multiple layers of material over the cutting die then place platform combination 'A', 'B', 'A' & metal adapter plate on top of the material.

Keeping the platform combination straight, guide it into the Cut'n'Boss with a steady forward motion.

Release the platforms when the rollers begin pulling them into the machine.


Remove the platforms once the motor stops running.

Optional: Place the magnetic shim between platform 'D' & the cutting die if more pressure is needed.


Important: Never place the magnetic shim or platform 'B' as the top or bottom layer of the platform combination

# USING OTHER BRANDS

 
Spellbinders  
Cutting Dies

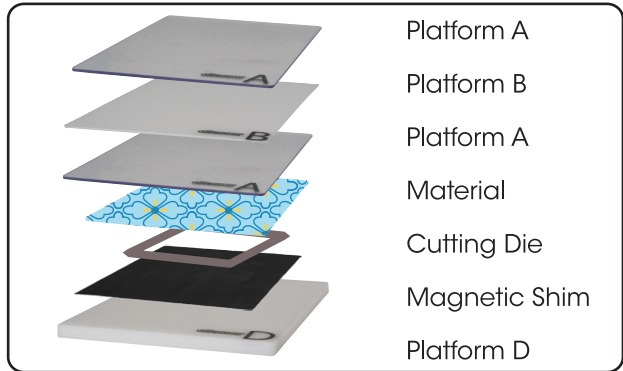

AccuQuilt  
Go Dies

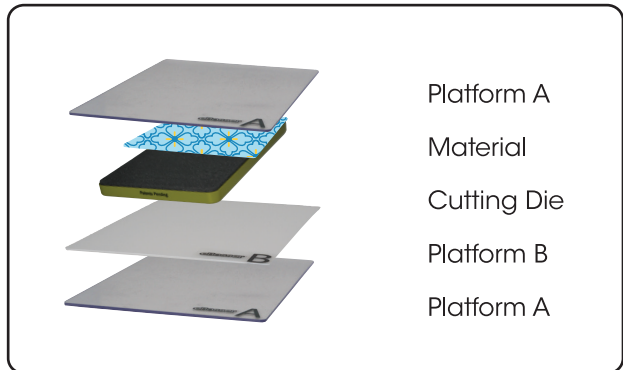 

Sizzix  
Cutting Dies

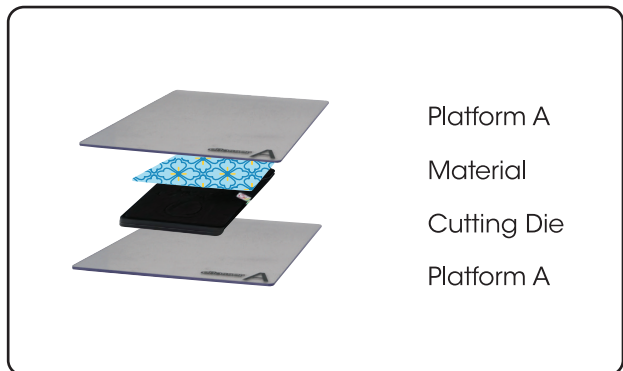 

Important: When using AccuQuilt Go dies or Sizzix cutting dies, do not have fabric hang over the dies, it may jam the machine.

Visit [craftwellusa.com](http://craftwellusa.com) to view more platform combinations for other brands



## TROUBLESHOOTING

If the machine does not turn on, check that the power cord is securely connected to the power adapter and that the adapter light is on.

To remove jammed platforms, press and hold the power button until the reverse feature engages and the platforms are released.

If the emboss or cut is not deep enough, try adding a shim.

To minimize warping of platforms, periodically rotate and turn the platforms over.

If the platforms are rejected from the device, check if too much material has been placed for cutting or embossing.

If the material has not been cut properly, check that the cutting die is not damaged.

## CAUTION

Only clean the Cut'n'Boss with a soft, dry cloth. Do not use abrasive cleaners, spray cleaners, or chemical cleaners on the machine.

Do not allow children to operate the Cut'n'Boss machine unsupervised.

Do not remove platforms until the motor has automatically shut off.

Keep hands away from platforms & parts in motion.

Do not leave objects inside the Cut'n'Boss machine when not in use.

Do not disable the safety sensors to override the motor control.

Forcing platforms & materials through the Cut'n'Boss will cause damage to your machine and may void the warranty.

Do not use the Cut'n'Boss for 60 minutes of continuous use without proper cool down.

Allow the Cut'n'Boss to cool down for 15 minutes before re-using.

The Cut'n'Boss is designed for home and recreation use.

Always power off you machine when not in use.

# LIMITED WARRANTY

Craftwell Incorporated ("Craftwell") warrants that our machines and their related accessories (collectively and individually referred to as "Product(s)") will be free from defects in material and workmanship. This limited warranty will extend for a period of one (1) year from date of purchase for electronic parts, such as motors, wiring, and switches, and thirty (30) days from date of purchase for accessories including platforms, dies, and embossing folders. The limited warranty period for all labor will extend for a period of ninety (90) days from date of purchase. This limited warranty applies only to Products purchased from Craftwell, an authorized Craftwell distributor (collectively referred to as "Craftwell Seller"). This limited warranty runs exclusively to the initial retail purchaser of the Product and may not be transferred or assigned. This limited warranty gives purchaser specific legal rights. Purchasers may have other legal rights which vary from jurisdiction to jurisdiction.

TO THE FULLEST EXTENT PERMITTED BY LAW, THESE WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES, SO THE ABOVE LIMITATION MAY NOT APPLY TO ALL PURCHASERS. IN SUCH EVENT, THE TERM OF SUCH IMPLIED WARRANTIES ARE LIMITED TO THE LIMITED WARRANTY PERIOD IDENTIFIED IN THE ABOVE PARAGRAPH. THIS LIMITED WARRANTY IS VOID IF THE LABEL BEARING THE PRODUCT'S SERIAL NUMBER IS REMOVED OR ALTERED. ANY TECHNICAL OR OTHER SUPPORT PROVIDED BY CRAFTWELL IS "AS IS" AND WITHOUT WARRANTIES OF ANY KIND. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO ALL PURCHASERS.

## Exclusive Remedies

Remedies under this limited warranty are limited, at Craftwell's sole discretion, to replacement or repair of defective Product/parts at Craftwell's expense. All defective Products/parts replaced under this limited warranty become the property of Craftwell. Craftwell will repair or replace defective Product/parts with new Product/parts, or used Product/parts that are at least functionally equivalent to the replaced Product/parts. If a Product/part is determined not to be defective, Craftwell will return the Product/part to purchaser without replacement or repair. Unless otherwise required by law, this is purchaser's sole and exclusive remedy for breach of this limited warranty.

## Exceptions

Craftwell does not warrant that the Products will meet specific requirements of purchaser or end user or that it will operate error-free or uninterrupted. This limited warranty does not cover Product defects or failure resulting from: (1) improper or unreasonable use or maintenance; (2) failure to follow operating instructions; (3) business or commercial use; (4) accident; (5) improper storage or operating conditions, including, but not limited to, excess moisture, lightning, power surges and connections to improper voltage supply; (6) unauthorized alteration or modification of original condition; (7) inadequate packing or shipping by purchaser; (8) alteration, loss of, damage to, or corruption of stored data; or (9) use with non-Craftwell products that cause damage to the Products.

## Limitation of Liability

CRAFTWELL IS NOT LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL, CONSEQUENTIAL, OR PUNITIVE DAMAGES, INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, LOST REVENUES OR LOST SAVINGS, REGARDLESS OF CAUSE OR LEGAL THEORY, EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN ANY EVENT OF LIABILITY, CRAFTWELL'S LIABILITY WILL NOT EXCEED THE AMOUNT OF THE PRICE PAID BY PURCHASER FOR PRODUCT. SOME STATES DO NOT ALLOW EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO ALL PURCHASERS.

## Governing Law and Venue

The laws of the State of New York will govern the validity, interpretation and enforcement of this limited warranty and any claims between the parties, without regard to conflicts of law principles. Venue for any dispute arising under this limited warranty or any claims between the parties will exclusively be a state or federal court of competent jurisdiction located in Queens, New York. The United Nations Convention on Contracts for the International Sale of Goods is specifically excluded and will not apply. All claims against Craftwell will be brought within two (2) years from purchaser's date of purchase, or one (1) year from the date of the occurrence, whichever is shorter.

## Obtaining Warranty Service

To obtain warranty service, the purchaser shall contact Craftwell Customer Service at (888) 315-8885 or by emailing [cs@craftwellusa.com](mailto:cs@craftwellusa.com), and adhere to the instructions provided. Purchaser shall return or ship the defective Product/parts to Craftwell, freight and all fees, including, but not limited to, duty, tax and freight ("Shipping Fees"), prepaid by purchaser. Purchaser remains responsible for Product/parts while in transit to and from Craftwell. Product/parts shall be accompanied, to the extent possible, by: (1) proof of purchase; (2) Return Merchandise Authorization number (RMA #), which must be clearly displayed on the outside of the shipping carton or a similar package affording an equal degree of protection; and (3) written document with (i) clear explanation of problem, (ii) date of purchase, (iii) name and address of Craftwell Seller, and (iv) model and serial number of Product. Craftwell will ship repaired or replaced Product/parts to purchaser, freight prepaid, unless Product/parts are determined not to be defective by Craftwell, or purchaser is outside of the US, in which case purchaser is responsible for all Shipping Fees. Repair or replacement of Product/part does not extend the original limited warranty period.

# eBrush

The Newest in  
Airbrushing Technology

Visit [www.craftwellusa.com](http://www.craftwellusa.com) for  
product information, project ideas & more!





the all-in-one embosser & die cutter®



fully automatic embosser & die cutter

# Look for our...

Embossing folders

Cutting Dies & Die Sets

Extra Platforms

Featured Craft Project Ideas

...and more!



Follow us!

